

# SENTINEL

## ASL 918 - Sentinel Pro Steering Lock

1. Remove all of the contents from the packaging.



2. Unscrew the backing with the screwdriver provided to allow you to put in 2 batteries.

You will hear a bleep whilst doing this.



3. Press power ON below the batteries to activate the alarm.



4. The system will sound and flash once.



5. Unlock the steering lock with the manual key provided and ensure the alarm is turned on.



6. Attach the steering lock to the wheel.



7. Now simply press 'ON' on the remote key, you will then see a yellow flashing LED to confirm activation.



8. To unlock, press off on the remote key and remove the steering lock using the manual key.

