



PL968 – Push Button

Changing your Sentinel Lock Combination

1. Open the key pad shutter
2. Push down the opening lever

NOTE: Make a note of your chosen combination before setting your lock

3. Open the Sentinel door to reveal the setting mechanism
4. Push the reset lever left and towards you and the reset lever will stay in position
5. Rotate the dials to your preferred combination
6. Push the reset lever up and away from you to return to the original position. Double-check combination before closing
7. Close Sentinel door and scramble the combination on the dials to lock the Sentinel
8. Close the shutter hatch to increase weather resistance and conceal dials from view

Mounting your Sentinel Lock

We suggest that you mount your Sentinel Lock in a discreet location away from direct view such as porches, garages, away from direct view

NOTE: You will need the following:

X-head/Pozidriv Screwdriver	Pencil	Spirit Level	Drill	Hammer
				

1. Open the Sentinel door
2. Position the lock on the chosen mounting surface
3. Use the spirit level to make sure the lock is vertical
4. Mark with a pencil the position of the screw holes
5. Remove the lock and drill holes
6. Use the hammer to fit the wall plus (if necessary)
7. The washers sit between the lock and the wall
8. Position the lock, insert and tighten screws
9. Close the Sentinel door
10. Scramble dials and close the shutter hatch